


Note: Refer to the MPC500 Owner's Manual page 9 for additional connection information.



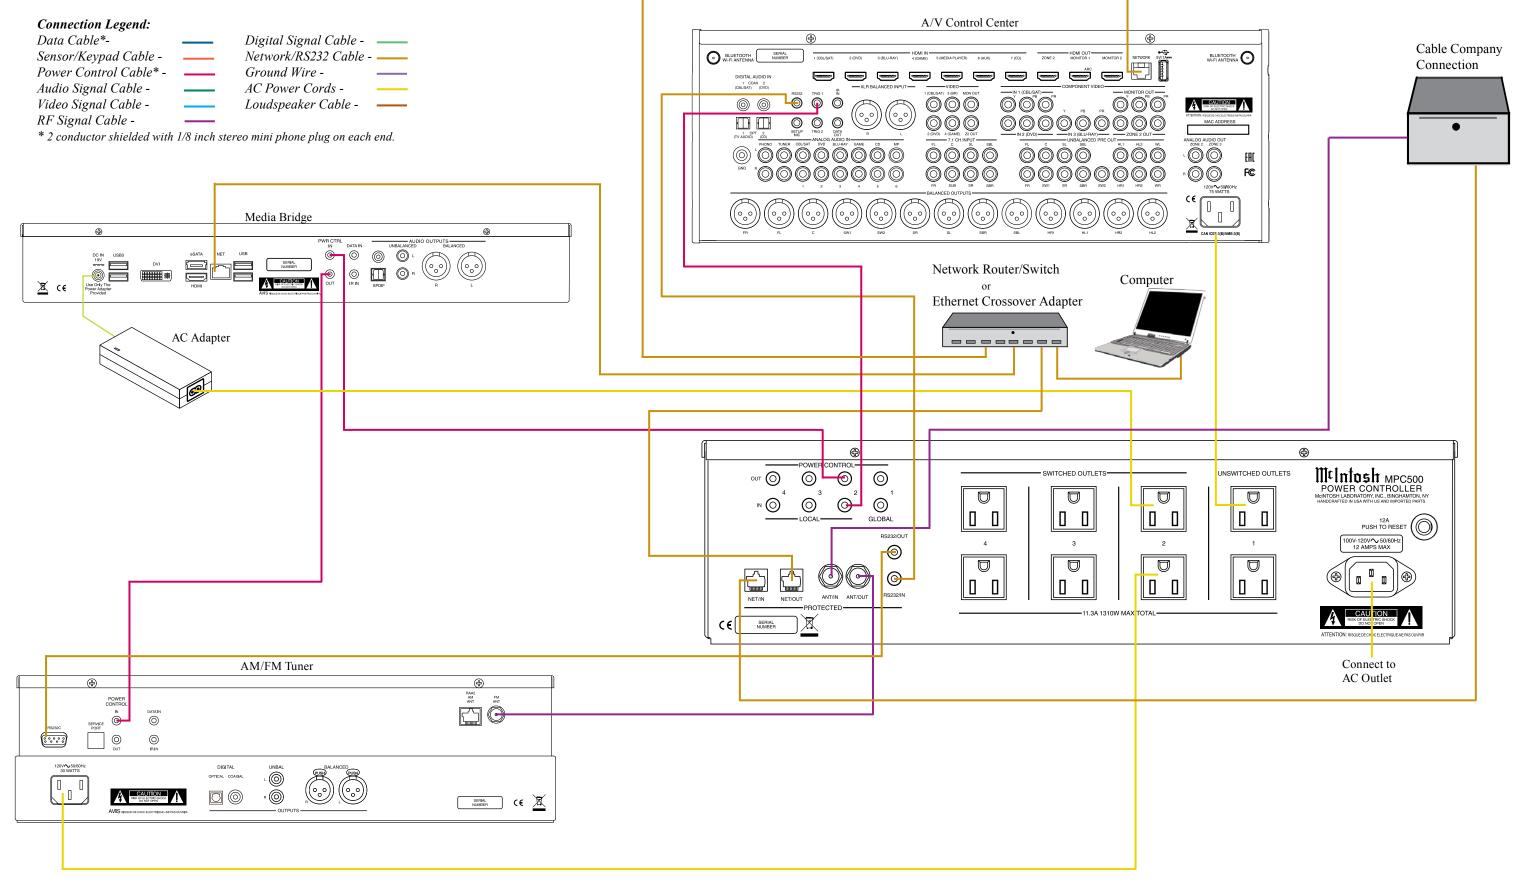

Note: Refer to the MPC500 Owner's Manual page 11 for additional connection information.

